








Product Description:

This radio features a compact size combined with features that allow for plenty of outdoor portable media play. In addition, this unit fits in a standard $3\frac{3}{4}$ " tachometer opening, resulting in a clever stereo install.

The Millennia PRV16 incorporates the following features:

-  AM/FM
-  USB input
-  Auxiliary input
-  U.S. and European tuning
-  Waterproof faceplate
-  40W x 4 amplifier
-  Fits a standard tachometer opening

Corporate:

Prospec Electronics
3325 South Morgans Point Rd.
Mount Pleasant, SC 29466
843-849-9037 (P)
843-849-9054 (F)
www.prospecelectronics.com

1

III、USB Operation Note: Our USB slot is for USB sticks only.

For play of other brands of media, please use the auxiliary input.

- A. Insert a USB stick into the USB slot. Songs must be in mp3 or wma format.
- B. Press the ▼ or ▲ for track down/track up respectively.
- C. Press ►|| button to pause the current track; press ►|| again to resume the track.
- D. A long press of the ▼ or ▲ will reverse and fast forward the current track respectively.
- E. Once you exit the boat/vehicle/spa, always remove the USB stick from the USB port so as to prevent damage to the stick.

IV、Auxiliary Input Mode

- A. Press the Mode button until "AUX" appears on the LCD screen.
- B. The use of auxiliary mode allows you to play the portable music device through the headphone jack. In order to accomplish this, an auxiliary adaptor must be used (our SEAMINI2 is recommended).

V、Bass, Treble, Balance, Fader, Loud, Equalizer, Area Tuning

- A. To adjust bass, treble, balance, and fader, long press the MODE button until the BAS feature appears. If you want to change the bass then use the VOL+ or VOL- button. To adjust the treble, balance, and fader setting, long press the MODE button until the BAS feature appears, then quickly press the MODE button until TRE appears. Repeat this step for balance (BAL), and fader (FAD). Adjust with the VOL+ or VOL- button.
- B. To enter LOUD mode, long press the Mode button until BAS appears, then quickly press the MODE button until LOUD appears. Adjust to either ON or OFF using the VOL+ or VOL-

3

IX、Troubleshooting

Issue	Cause	Solution
No Power	1. Incorrect wiring 2. Fuse is blown	1. Double check wiring 2. Replace fuse
No Sound	1. Speaker connection came loose 2. Bad speaker 3. Output blown	1. Double check connection and re-attach 2. Replace bad speaker with known good speaker and connect. 3. Send unit in for repair
No Reception	1. Antenna not firmly seated in socket. 2. Stations are being bypassed when in seek mode.	1. Insert firmly. 2. Enter manual seek mode
USB stick not reading	1. File must be a mp3 or wma file	1. Convert file format to mp3 or wma
Aux in distortion	1. Volume may be up too much on input device	1. Lower volume on input device until distortion goes away.
Media device does not work through USB jack.	1. USB input only reads USB sticks	1. Play media device through auxiliary input.

Please note that the USB input only reads USB sticks. It is not designed to play other forms of portable media nor is it a charging station.


6

- C. To enter a specific equalizer setting, long press the MODE button until BAS appears, then quickly press the MODE button until EQ appears. Use the VOL+ or VOL- button to adjust (options include FLAT, CLASSIC, POP, ROCK, or EQ OFF).
- D. To enter AREA tuning mode, long press the MODE button until BAS appears, then quickly press the MODE button until AREA appears. Use the VOL+ or VOL- to designate between U.S and European frequency.

VI、Clock Adjustment

Clock display and adjustment: Long press the BAND button until the time displays. While time is displayed, long press the BAND button again until hour is flashing. Then adjust hour with volume buttons. Once hour is set, quick press BAND until the minutes are flashing then adjust with volume buttons. New time setting will be accepted automatically.

VII、Installation

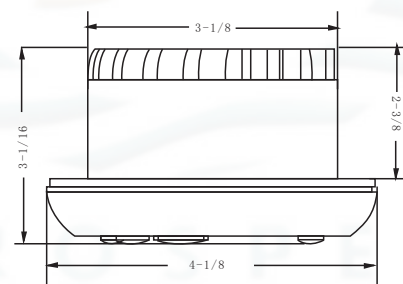

4


Owner's Manual

Model: Millennia PRV16




Stereo Receiver built for the Outdoors
With AM/FM, USB Input, and Auxiliary Input

Once suitable location is determined, drill the hole and secure the stereo using the metal mounting bracket. If the bracket needs to be shortened, remove the appropriate number of breakaway segments using a pair of pliers.

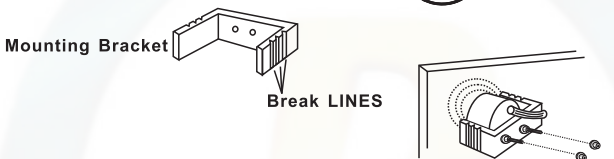

VIII. WIRING

Wiring Diagram

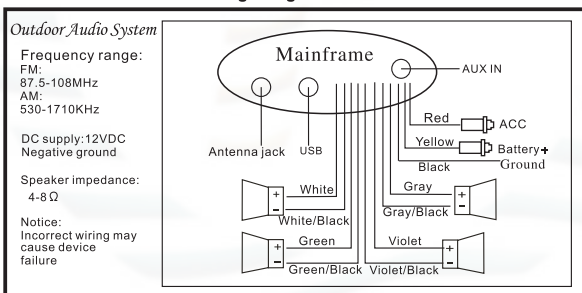

*Please note that the RED ACC wire must be wired into a 12V accessory on/off switch.

I. Front Panel Layout



- Power** Power On/Off button (once powered on, a long press of the power button results in power off. A quick press of the power button results in "MUTE" function.)
- VOL+** VOL+Volume Increase Button
- VOL-** VOL-Volume Decrease Button
- MODE** Mode Button
- ▼** Track Down Button
- ▲** Track Up Button
- BAND ►►** Use the ►► portion to Play/Pause the USB stick function.

II. Radio Operation

Press BAND button to access FM and AM. Use the ▲ and ▼ buttons to tune up and tune down. Long press each button to access manual seek mode, allowing you to go up or down the frequency scale one odd digit at a time.